

# Terminal Stick Insertion Tool Operation Manual Order No. 62200-2000

For LFH™ Series 71715 and 71719

- Description
- Operation
- Maintenance

Order No TM-622002000 Revision: B

# **WARNING**

**NEVER** OPERATE, SERVICE, OR ADJUST THIS MACHINE, OR INSTALL TERMINATION TOOLING, WITHOUT PROPER INSTRUCTION AND WITHOUT FIRST READING AND UNDERSTANDING THE INSTRUCTIONS IN THIS MANUAL.

# **WORK SAFELY AT ALL TIMES**

For Service, Contact Your **Local Molex Sales Office** 

**Molex Application Tooling Group** 2200 Wellington Court

Lisle, Illinois 60532 Tel: 630-969-4550 Fax: 630-505-0049

**UNCONTROLLED COPY** Order No TM-622002000 Release Date: 06-28--11 Page 2 of 19 Revision Date: 07-21-11

# **Table of Contents**

### **SECTION**

- 1. **General Description**
- Setting Up and Operation 2.
- Maintenance and Troubleshooting 3.
- 4. Parts Lists and Assembly Drawings

**UNCONTROLLED COPY** Order No TM-622002000 Release Date: 06-28--11 Page 3 of 19 Revision Date: 07-21-11

# **General Description**

- 1.1. Description
- 1.2. Features
- 1.3. Technical Specifications
- 1.4. Delivery Check
- 1.5. Tools
- 1.6. Installation
- 1.7. Products

Order No TM-622002000 Revision: B

#### **General Description**

#### 1.1 Description

The Molex 62200-2000 Stick Insertion Fixture is used to load four LFH™ contact terminal sticks and a shield assembly. The four LFH™ terminal sticks are loaded into a drawer and the shield assembly is placed into a sliding nest. Then the cable is secured under the cable clamp. Insertion occurs when the lever is pulled.

#### 1.2 Features

- Four LFH™ terminal sticks are inserted into the shield assembly simultaneously.
- The terminal stick holding drawer includes a feature to prevent loading the LFH™ terminal sticks, and the shield assemblies upside-down.
- The insertion lever has a positive stop for consistent insertions, ensuring no damage to the shield or terminal sticks.
- The insertion lever can be positioned for either a right handed or left handed operator.
- The stick drawer has 1/4 turn screws on the drawer cover making it easier to load and unload the LFH™ terminal sticks and shield assemblies.

# 1.3 Technical Specifications

#### **Dimensions**

Height 130mm (4.70")
Width 400mm (15.70")
Depth 225mm (8.90")
Weight 11.8kgf (26.0lbs.)

#### **Production Rate:**

This insertion tool terminates up to 50 shield assemblies per hour depending on the operators skill.

## 1.4 Delivery Check

62200-0734

Carefully remove the Terminal Stick Insertion Tool from its shipping container. Check to see that following items are included in this package:

<b>Decription:</b>		Quantity	
62200-2000	Terminal Stick Insertio	n Tool	1
TM-62200200	00 Instruction Manua	al 1	

Plug Removal Tool


#### 1.5 Tools

The following tools are recommended for setup and adjustments to the this tool.

- ✓ Metric Hex Wrench Set
- ✓ 6 inch Adjustable Wrench

#### 1.6 Installation

Before attempting to operate the Terminal Stick Insertion Tool, be sure it is securely fastened to a clean, study work bench or table in a well-lighted area. Fasten the base with four M8 SHCS(s), of sufficient length for the table top. (Not supplied). See Figure 1-1.

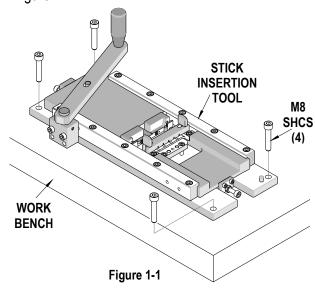

Damage to the shield assembly and/or injury to the operator could result were the tool to move during insertion. Be sure there is ample room around the tool to allow easy loading and operation.

#### 1.7 Products


Orde	r No.	Description		
71715-4000	71715-4001	1.27mm (.050") Pitch LFH™ Matrix 50		
71715-4002		I/O Shield Cable Kit, Terminal Stick, 50 Circuits		
71719-3000	71719-3009	1.27mm (.050") Pitch LFH™ Matrix 50 I/O Shield Cable Kit, Subassembly, and 200 Circuits		

Order No TM-622002000 Release Date: 06-28--11 **UNCONTROLLED COPY**Revision: B Revision Date: 07-21-11

- **Setting Up And Operation**
- 2.1. Adjustments
- 2.2. Operation

Order No TM-622002000 Revision: B Release Date: 06-28--11 Revision Date: 07-21-11 **UNCONTROLLED COPY** 

#### **Principal Mechanical Parts of the Terminal Stick Insertion Tool**

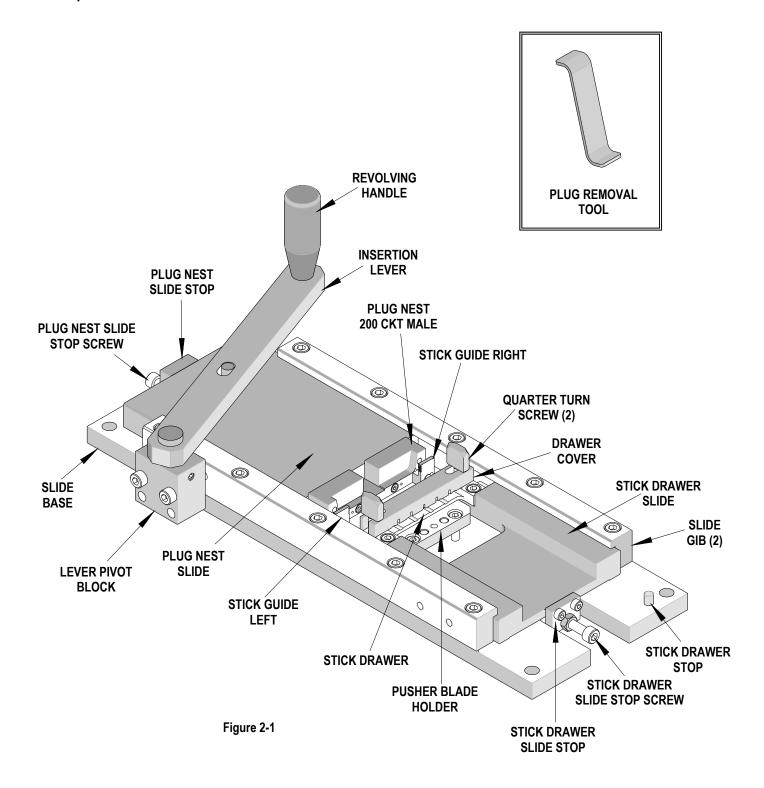

Order No TM-622002000 Revision: B

#### Set Up

The Terminal Stick Insertion Tool has been factory set and should not need any adjustments. However, over time if there are some adjustments needed follow the steps below.

#### 2.1 Adjustments

#### Plug Nest Slide Stop

The forward (insertion) position of the plug nest is controlled by a plug nest slide stop screw. To adjust the plug nest:

- Loosen the lock nut on the plug nest slide and turn the slide stop screw counterclockwise several turns. See Figure 2-1.
- 2. Make a sample assembly and check alignment.

**Note**: Care must be taken when inserting the terminal sticks. There is no stop only the pusher blades.

- Leave the plug nest in the inserted position.
  Keep the shield assembly in the nest and
  adjust the slide stop screw clockwise until the
  stop screw <u>just starts</u> to move the plug nest
  back.
- 4. Tighten the lock nut.
- 5. The back (retracted) position of the plug nest is controlled by the pin travel in the slot on the insertion lever. No adjustment is needed.

#### Stick Drawer Slide

The forward (loading) position of the stick drawer is controlled by a stick drawer slide stop screw. See Figure 2-1.

The screw is adjusted until the bottom of the narrow groove (that the pusher blade travels through) just barely touches the back of the pusher blades.

This will keep the pusher blades from being damaged if the stick drawer is pushed into them. The stick drawer stop will prevent the stick drawer slide from leaving the tool.


#### Slide Gib

If either slide has excessive side clearance, faulty insertions may result. There are two slide gibs to guide both slides.

Loosen the screws on one of the gibs and move the gib until the side clearance is minimized but the slide can still move freely.

#### Left or Right Handed Operation

The insertion lever can be installed on either the left side or the right side of the insertion tool depending on the operator's preference. To adjust

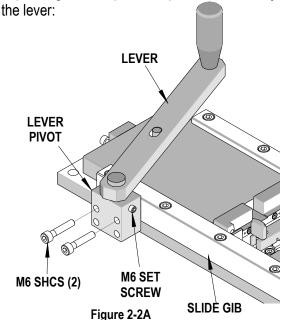

1. Remove the two M6 SHCS from the lever pivot mounted to the side gib. See Figure 2-2A.

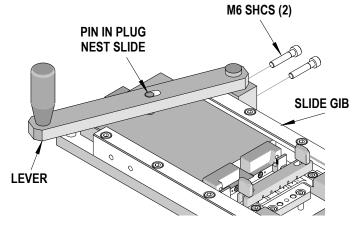



Figure 2-2B

Order No TM-622002000 Release Date: 06-28--11 Ul
Revision: B Revision Date: 07-21-11

- 2. Lift up the entire lever and rotate the handle with the mounting block to the opposite side of the tool.
- 3. Place the lever over the pin in the plug nest slide
- 4. Tighten the two M6 SHCS. See Figure 2.2B.

#### 2.2 Operation

Load the shield assembly into the plug nest.
 The plug nest can be loaded only one way.
 See Figure 2-3. The long side of the "D" shell is towards the top of the nest.

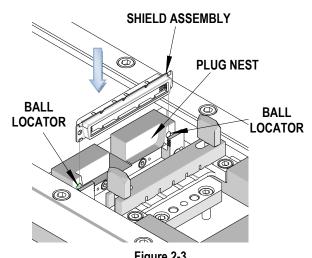


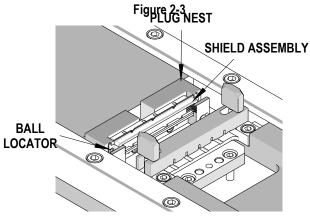


Figure 2-4


**Note**: Make sure that the back of the shield faces the stick drawer (the mating end of the shield faces away from the stick drawer).

 The screw holes in the shield should also "pop" into the ball locators in the nest. See Figure 2-4.

- 3. Make sure that the stick drawer is pushed forward until it stops.
- Remove the drawer cover by turning the two quarter-turn screws 90° so that the head of the screw can be inserted into the slot on the cover and the cover can be pulled up. See Figure 2-5.

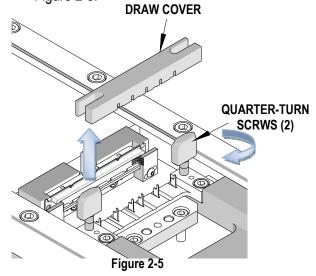


 Place the bottom row LFH™ stick assembly into the drawer. The stick drawer has small slots and grooves in it which it accepts the stick latches to avoid loading a stick upside down. See figure 2-6.

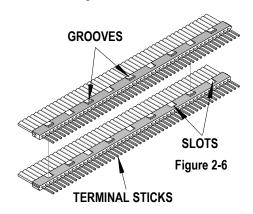

 Repeat step 5 for the remaining LFH™ terminal sticks in the connector. The groove orientation on the terminal sticks must be the same for all the sticks; if it is not, the sticks will not stack properly. See Figure 2-7.


**Note:** Even if the sticks have no wires terminated to them, they still must be loaded in the drawer. The tooling is designed to accept (4) sticks only.

Order No TM-622002000 Revision: B

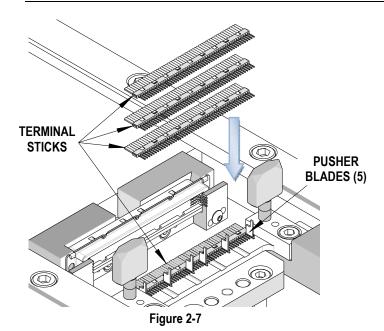


- Insert the cover over the two quarter-turn screws and rotate the head of the screws 90° to lock. The cover should hold sticks in place for insertion and is not meant to clamp stacked terminal sticks.
- If the cover does not snap into position, one or more of the LFH™ terminal sticks in the drawer were loaded upside - down.
- 9. Remove the LFH™ terminal sticks and restack them, then close the cover. See Figure 2-7.
- 10. Slowly pull the handle on the insertion lever towards the LFH™ terminal sticks. When the terminal sticks have started into the shield housing, quickly follow through with the handle motion, until it stops. It is important to "feel" the start of the terminal sticks into the shield; if a lot of resistance is felt, move the insertion lever back to check for misalignment or obstructions.
- 11. It is very important to quickly snap the terminal sticks into the housing. Due to the shear properties of the LFH™ terminal sticks over mold material, a slowly loaded assembly will probably have sheared latches, resulting in low terminal retention force. If they are quickly snapped into the housing, the latches will not have time to shear, and retention forces will be much higher. Refer to the application

- specification document no. AS-71719-9998 for housing assembly dimensional requirements.
- 12. In the fully inserted position, lift the drawer cover up by turning the two quarter-turn screws 90°. See Figure 2-8.

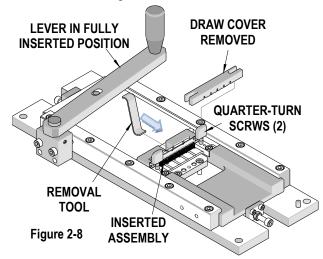

- 13. Using the plug removal tool, Order No. 62200-0734, lift the finished assembly out of the shield nest.
- 14. There is a cleared out area in the center of the shield nest for the plug removal tool to enter. Remove the inserted assembly from the cable clamp. See Figure 2-9.
- 15. Return the nests back to their starting positions.

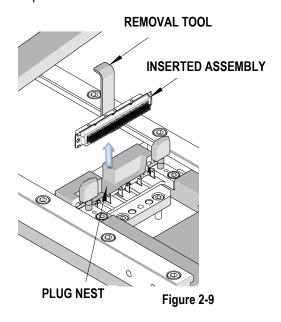

Page 10 of 19

Order No TM-622002000 Release Date: 06-28--11 **UNCONTROLLED COPY**Revision: B Revision Date: 07-21-11

### Maintenance

- 3.1. Cleaning
- 3.2. Lubrication
- 3.3. Perishable Parts
- 3.4. Troubleshooting

Order No TM-622002000 Release Date: 06-28--11 **UNCONTROLLED COPY**Revision: B Revision Date: 07-21-11

#### 3.1 Cleaning

For efficient operation, this tool should be cleaned daily with a soft bristle brush to remove any debris and plating dust from the slide area and the two nests. For continuous operation this may have to be done several times throughout the day.

See Section 3.4 for recommended Preventive Maintenance Schedule.

When it is necessary to change tooling, care should be taken to remove any debris from tapped holes or mounting surfaces. Debris can prevent tooling from being properly locked into position.


**NOTE**: Using compressed air to clean tooling is *not* recommended. Chips can wedge in the tooling and/or fly at an operator.

#### 3.2 Lubrication

- 1. Oil all moving parts of this tool.
- 2. Sparingly lubricate the sliding parts approximately every month with SAE 10W motor oil or equivalent.
- 3. Lubricate with multipurpose synthetic lubricant with Teflon or an equivalent. Molex ships its presses pregreased with Permatex multi-purpose synthetic grease with Teflon No. 82329. SAE 10 non-detergent oil or light spindle oil or 3-in-1 oil should be used on pivot points.

WARNING: Never use a penetrant such as WD40 for any lubrication on this tool.

4. Lubricate all points shown in Figures 3-1 with the specified oil and grease (or equivalent).

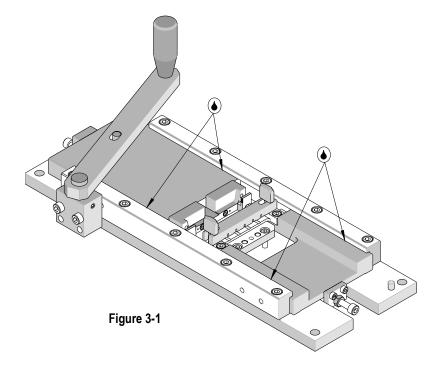

**UNCONTROLLED COPY** Order No TM-622002000 Release Date: 06-28--11 Page 12 of 19 Revision Date: 07-21-11

#### 3.3 Perishable Parts

Customers are responsible for maintaining this tool. Perishable parts are those parts that come in contact with the product and will wear out over time. Molex recommends that all customers keep at least one set of the perishable tool kit in stock at all times. This will reduce the amount of production down time. These parts are identified in the parts list in Section 4.

#### 3.4 Preventive Maintenance Chart

An example of a maintenance chart is shown below. Copy and use this chart to track the maintenance of your Press or use this as a template to create your own schedule or use your company's standard chart, if applicable.

**Daily**: Clean. See Section 3.1.

Monthly: Clean as necessary, See Section 3.1.

Lubricate sliding parts, See Section 3.2.

CHECK SHEET	MONTH	YEAR

Week	Daily Clean	Days of the Week					Calutian		
Week		MON	TUE	WED	THU	FRI	SAT	SUN	Solution
1									
2									
3									
4									
Cleaning Reapply greasing Reapply oil	Yes								Soft Brush Industrial Degreaser
Inspect all tooling for wear	Yes			-					Replace if signs of wear.

Schedule should be adjusted up or down depending on usage. Molex recommends that a log of preventive maintenance be kept with the press.

3.4 Troubleshooting

Symptom • Cause			Solution			
	•	Terminal sticks not fully inserted	Check forward position of plug nest slide. Adjust if necessary. See <i>Adjustments</i> Section 2.1.			
Poor terminal retention	le Incortion lovor clowly		After the contacts have started into the shield, the insertion lever must be "snapped" in to position to avoid shearing the terminal stick latches.			
retention	•	Terminal stick to shield misaligned	Make sure that there is not excessive side clearance in the slides. If there is, adjust one slide gib. See <i>Adjustments</i> Section 2.1.			
	•	Shield not located in nest	Make sure that the shield has snapped into the nest and is located by the spring loaded balls. Section 2.2.			
	misalignment If the seld or terminal Shield not located in past Mal		Make sure that there is not excessive side clearance in the slides. If there is, adjust one slide gib. See <i>Adjustments</i> Section 2.1.			
Shield or terminal damaged			Make sure that the shield has snapped into the nest and is located by the spring loaded balls. Section 2.2.			
	•	Terminal stick(s) loaded upside down	All four terminal sticks must be in the proper orientation, otherwise shield damage will result. See Section 2.2.			

Order No TM-622002000 Release Date: 06-28--11 **UNCONTROLLED COPY** Page 13 of 19 Revision: B Revision Date: 07-21-11

- 4.1 Main Parts List and Assembly Drawing
- 4.2 Insertion Fixture Parts List and Assembly Drawing
- 4.3 Tool Kit Parts List and Assembly Drawing

Order No TM-622002000 Revision: B

# 4.1 Main Parts List and Assembly

	62200-2000 Terminal Stick Insertion Tool Figure 4-1						
Item	Item Order No Engineering No. Description Notes Quant						
1	62200-0700	62200-0700	Terminal Stick Insertion Fixture	Figure 4-3	1		
2	62200-1900	62200-1900	Terminal Stick Insertion Slide 200 Circuit Tool Kit	Figure 4-2	1		

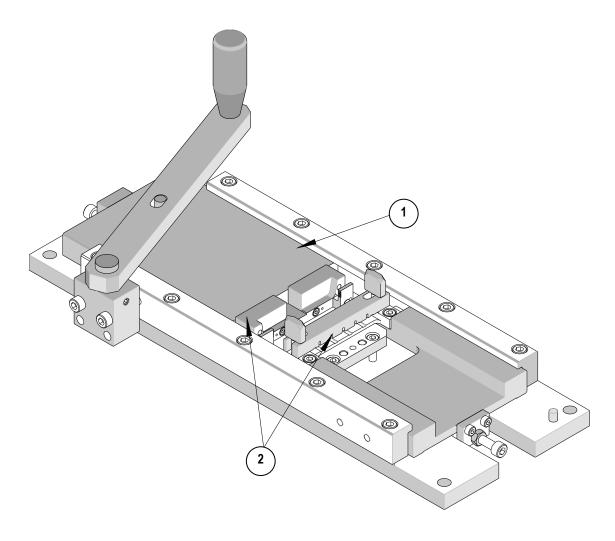


Figure 4-1


Order No TM-622002000 Revision: B

# 4.2 Parts List Insertion Fixture

62200-0700 Terminal Stick Insertion Fixture Figure 4-2								
Item	n Order No Engineering No. Description		Description	•PP	Quantity			
1	62200-0723	62200-0723	Slide Base		1			
2	62200-0724	62200-0724	Slide Gib		2			
3	62200-0725	62200-0725	Stick Drawer Slide		1			
4	62200-0726	62200-0726	Plug Nest Slide		1			
5	62200-0727	62200-0727	Lever Pivot Block		1			
6	62200-0728	62200-0728	Insertion Lever		1			
7	62200-0730	62200-0730	Lever Pivot Pin		1			
8	62200-0731	62200-0731	Plug Nest Slide Stop		1			
9	62200-0732	62200-0732	Stick Drawer Slide Stop		1			
10	62200-0734	62200-0734	Plug Removal Tool		1			
11	63600-0135	63600-0135	Handle Revolving M8		1			
			Hardware					
12	N/A	69809-1620	M6 by 20 Long Dowel		1**			
13	N/A	69901-1416	M4 by 16 Long SHCS		2**			
14	N/A	69901-1616	M6 by 16 Long SHCS		2**			
15	N/A	69901-1630	M6 by 30 Long SHCS		12**			
16	N/A	69901-1635	M6 by 35 Long SHCS		2**			
17	N/A	69904-3612	M6 by12 Long Set Screw Cup		1**			
18	N/A	69907-1600	M6 Hex Nut		2**			
	<ul> <li>PP - Part is a Perishable Part.</li> </ul>							
	** Available from an industrial supply company such as MSC (1-800-645-7270).							

Order No TM-622002000 Release Date: 06-28--11 **UNCONTROLLED COPY** Revision: B Revision Date: 07-21-11

# **Assembly Insertion Fixture**

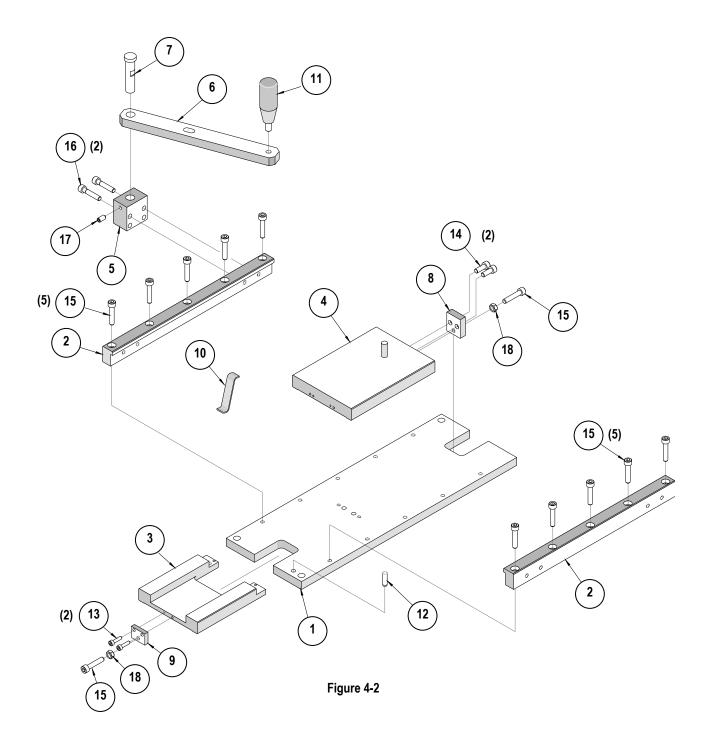

Order No TM-622002000 Revision: B

# 4.3 Parts List Tool Kit

	62200-1900 Terminal Stick Insertion Slide 200 Circuit Tool Kit Figure 4-3							
Item	Order No   Engineering No.   Description		•PP	Quantity				
1	11-32-7560	AM-63527A111	Carbide Ball 5/32" Diameter		2			
2	11-32-7805	AM-63529A211	Quarter Turn Screw M5		2			
3	11-40-5129	63303T108	Compression Spring		2			
4	62200-0818	62200-0818	Pusher Blade	PP	6			
5	62200-1903	62200-1903	Stick Drawer 200 Circuit		1			
6	62200-1904	62200-1904	Drawer Cover 200 Circuit		1			
7	62200-1911	62200-1911	Plug Nest 200 Circuit Male		1			
8	62200-1912	62200-1912	50 Circuit Stick Guide Right		1			
9	62200-1913	62200-1913	50 Circuit Stick Guide Left		1			
10	62200-1919	62200-1919	Pusher Blade Holder		1			
11	62200-1921	62200-1921	Pusher Blade Clamp		1			
			Hardware					
12	N/A	69809-1308	M3 by 8 Long Dowel		8**			
13	N/A	69809-1616	M6 by 16 Long Dowel		2**			
14	N/A	69901-1320	M3 by 20 Long SHCS		2**			
15	N/A	69901-1510	M5 by 10 Long SHCS		2**			
16	N/A	69901-1514	M5 by 14 Long SHCS		2**			
17	N/A	69902-1312	M3 by 12 Long BHCS		2**			
18	N/A	69903-1310	M3 by 10 Long FHCS		3**			
19	N/A	69904-3510	M5 by 10 Long Set Screw Cup		2**			
	<ul> <li>PP - Part is a Perishable Part.</li> </ul>							
'	** Available from an industrial supply company such as MSC (1-800-645-7270).							

Order No TM-622002000 Revision: B

# **Assembly Tool Kit**

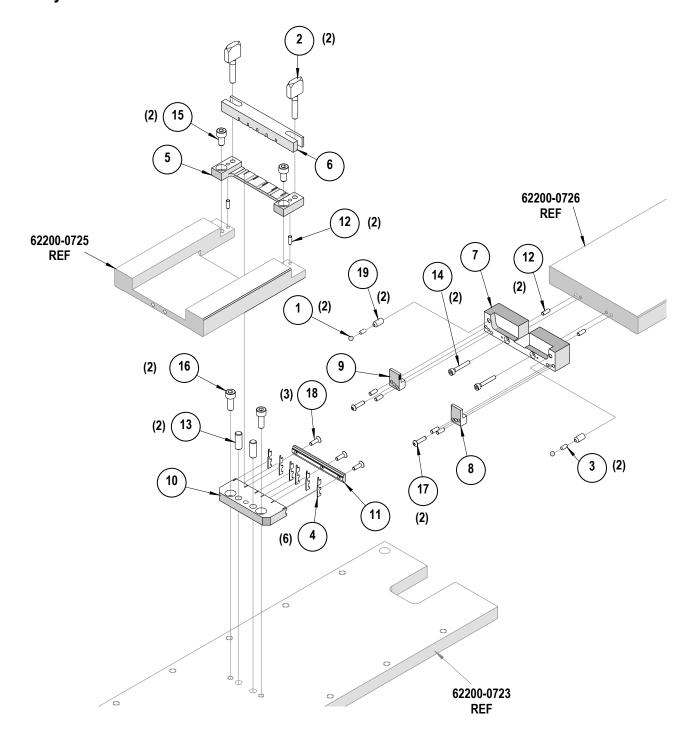


Figure 4-3

http://www.molex.com

Order No TM-622002000 Revision: B